## H100

# Accessories Guide





## STD. Spec.

### Adapter



**PWR-H100-5V2A-CN** 

H100 adapter(CN), I/P 100-240V, O/P: 5V2A, use with DC-WH-TypeC cable.



**PWR-H100-5V2A-EU** 

H100 adapter(EU), I/P 100-240V, O/P: 5V2A, use with DC-WH-TypeC cable.



**PWR-H100-5V2A-UK** 

H100 adapter(UK), I/P 100-240V, O/P: 5V2A, use with DC-WH-TypeC cable.



**PWR-H100-5V2A-US** 

H100 adapter(US), I/P 100-240V, O/P: 5V2A, use with DC-WH-TypeC cable.

**USB** Cable



DC-WH-TypeC

1.0 meter Type-C cable


### Lanyard



SG-H100-LYD-WT

H100 lanyard, White

### Sim Tray Ejector

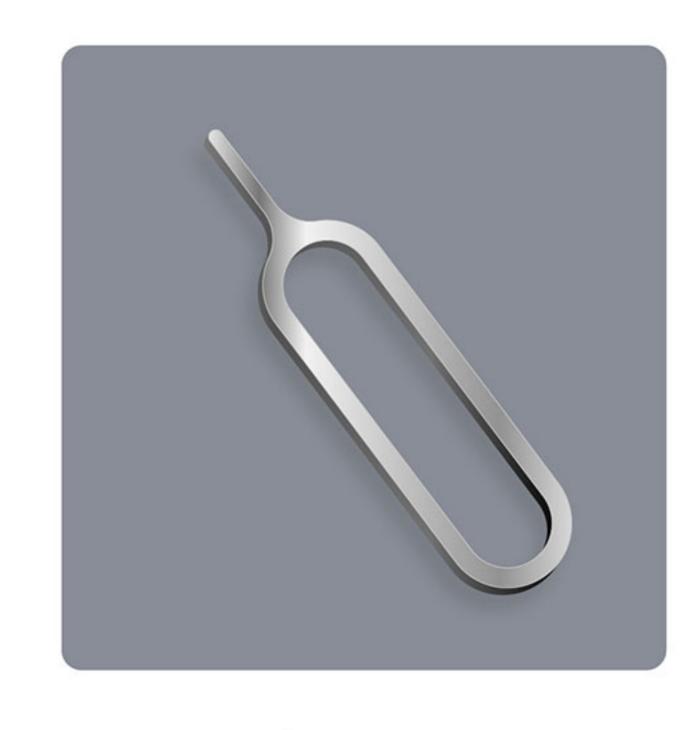

SIM-TRAY-EJECTOR

Sim tray ejector

# Optional

## **Charging Cradle**



H100 charging cradle can charge

one device, use with DC-WH-TypeC cable.


## **Charging Rack**



### Each unit of the charging rack has

various levels and can charge up to 8 devices at a time, use with charging cradle. The quadrate alloy cradle is elegant and rugged. You can have tens of devices charged on several charging racks. It saves space and time, ideal for indoor use. Applicable models: C6000, H100, C70, C71, C72 (without UHF module and pistol grip).

#### Charging cradle adopts magnetic connect

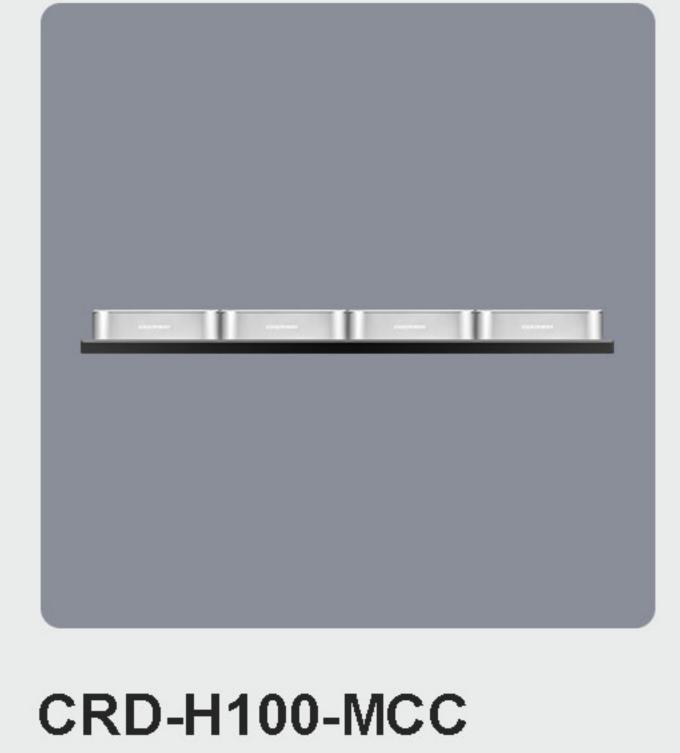

H100 charging cradle adopts

magnetic connect, it supports joint charging of 4 device, use with DCPWR-H100-12V5A-XX adapter.

Adapter



H100 adapter(CN), I/P: 100-240V,



Fax: 0086-755-23223310

O/P: 12V5A, DC

Wechat