

SHENZHEN CHAINWAY INFORMATION TECHNOLOGY CO.,LTD

# UHF Sled Reader

---

## R6 User Manual



# Content

Content.....	1
Statement.....	3
Chapter 1 Product intro .....	4
1.1 Intro.....	4
1.2 Precaution before using battery.....	5
1.3 Charger .....	6
1.4 Notes.....	7
Chapter 2 Installation instructions.....	8
2.1 Appearance .....	8
2.3 Battery charge .....	9
2.4 Buttons and function area display .....	10
Chapter 3 Demo Test.....	11
3.1 Install demo-uhf-bt (1.0.8).....	11
3.2 Pairing Device .....	12
3.3 UHF Scan Function .....	14
3.4 UHF Configuration.....	15
3.5 UHF Encryption.....	16
3.6 UHF Tag Reading and Writing.....	17
3.7 UHF Tag Lock and Kill.....	18
3.8 Firmware Upgrade.....	20
3.9 Barcode Scan Test.....	21
Chapter 4 Device characteristic.....	22



# Statement

© 2013 by ShenZhen Chainway Information Technology Co., Ltd. All rights reserved.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission written from Chainway. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an “as is” basis. All software, including firmware, furnished to the user is on a licensed basis. Chainway grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Chainway. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Chainway.

Chainway reserves the right to make changes to any software or product to improve reliability, function, or design.

Chainway does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Chainway intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Chainway products.

# Chapter 1 Product intro

## 1.1 Intro

This is a new UHF back clip product, featuring the Cortex-M3 STM32 processor with excellent working performance. The device can be used with any Android and IOS device as a host. The device combines powerful UHF (Read and write) functions with 2D scanning for greater sensitivity. It equipped with a host is widely used in clothing inventory, warehouse management, vehicle management, financial management and other fields.

## 1.2 Precaution before using battery

- Do not leave battery unused for long time, no matter it is in device or inventory. If battery has been used for 6 months already, it should be check for charging function or it should be disposed correctly.
- The lifespan of Li-ion battery is around 2 to 3 years, it can be circularly charged for 300 to 500 times. (One full battery charge period means completely charged and completely discharged.)
- When Li-ion battery is not in used, it will continue discharge slowly. Therefore, battery charging status should be checked frequently and take reference of the related battery charging information on the manuals.
- Observe and record the information of a new unused and non-fully charged battery. On the basis of operating time of new battery and compare with a battery that has been used for long time. According to product configuration and application program, the operating time of battery would be different.
- Check battery charging status at regular intervals.
- When battery operating time drops below about 80%, charging time will be increased remarkably.
- If a battery is stored or otherwise unused for an extended period, be sure to follow the storage instructions in this document. If you do not follow the instructions, and the battery has no charge remaining when you check it, consider it to be damaged. Do not attempt to recharge it or to use it. Replace it with a new battery.
- Store the battery at temperatures between 5 °C and 20 °C (41 °F and 68 °F).

## 1.3 Charger

The charger type is GME10D-050200FGu, output voltage/current is 5V DC/2A. The plug considered as disconnect device of adapter.

## 1.4 Notes

**Note:**

Using the incorrect type battery has danger of explosion.  
Please dispose the used battery according to instructions.

**Note:**

Due to the used enclosure material, the product shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

**Note:**

The adapter shall be installed near the equipment and shall be easily accessible.

**Note:**

The suitable temperature for the product and accessories is 0-10°C to 50°C.

**Note:**

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



# Chapter 2 Installation instructions

## 2.1 Appearance

R6 right and front appearances are showing as follows:



### Indicating Lamps instruction

Lamps		Description
Indicating Lamps	Power	Constant light up (battery available)/Flash (Low battery)
	Bluetooth	Constant light up (Bluetooth connected)
	Work	Flash when read UHF tags

## **2.2 Battery charge**

By using USB contact, the original adaptor should be used for charging the device. Make sure not to use other adaptors to charge the device.

## 2.3 Buttons and function area display


R6 Sled reader has 1 power button and 3 indicating lamps.



# Chapter 3 Demo Test


## 3.1 Install demo-uhf-bt (1.0.8)

1. Copy demo-uhf-bt (1.0.8) into internal storage of smart phone or C7x device.
2. Click to install.
3. Click icon to open demo.

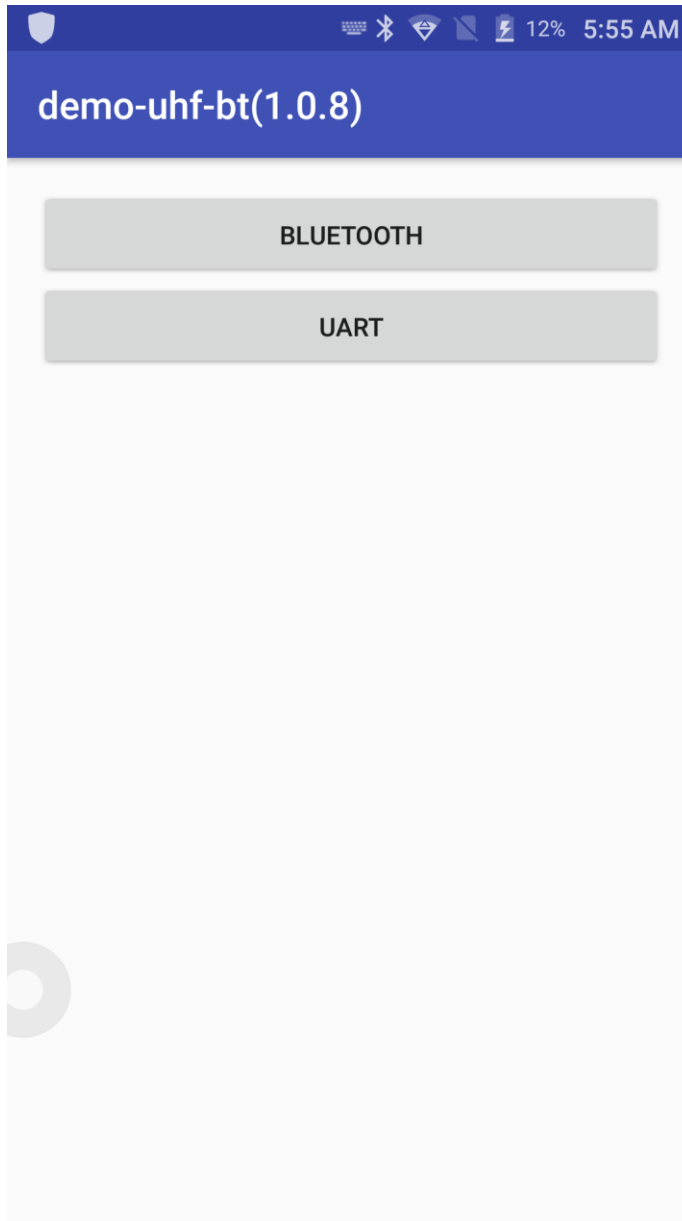


## 3.2 Pairing Device

1. Switch on Bluetooth function of smartphone or C7x device.
2. Power on R6.
3. Click BLUETOOTH in the demo.
4. Click SEARCH to search for Nordic\_UART\_CW.

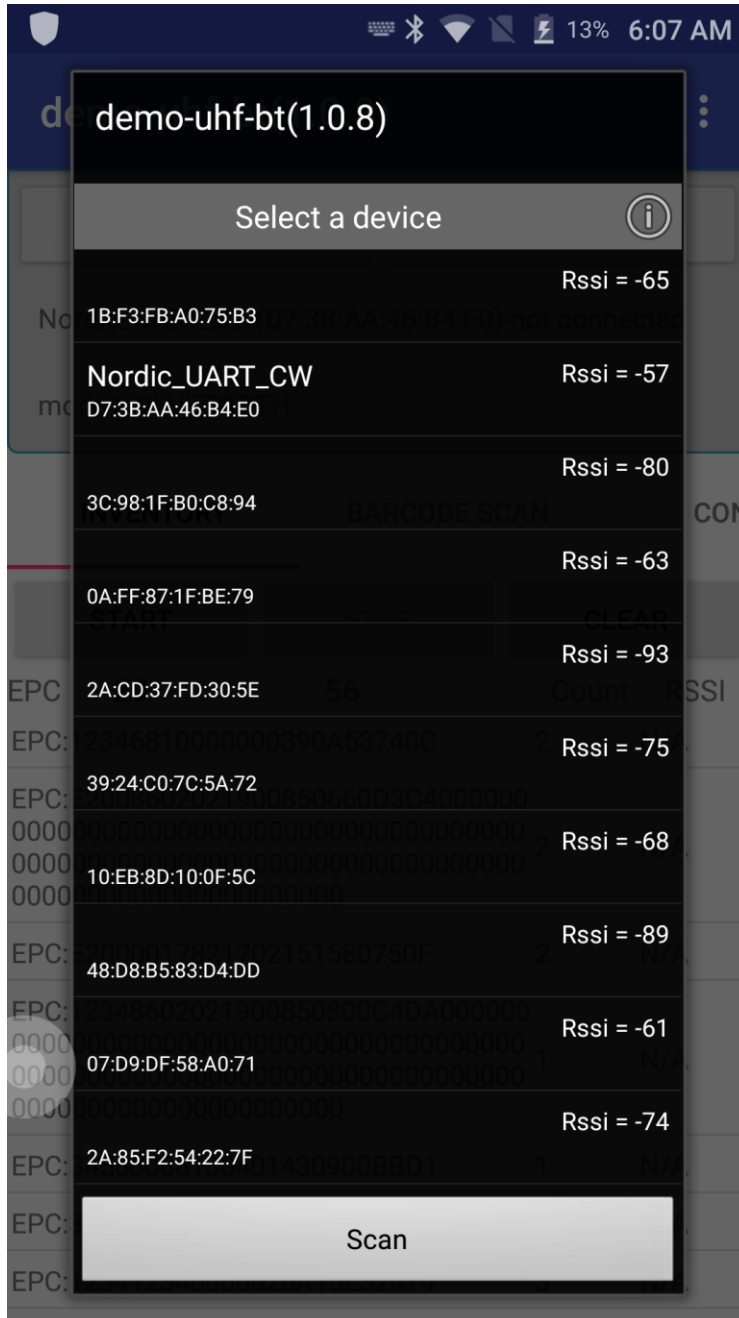


5. Click Nordic\_UART\_CW to connect.

6. After connecting successfully, user could click 3 dots on top right to check UHF version, battery percentage and UHF module temperature.

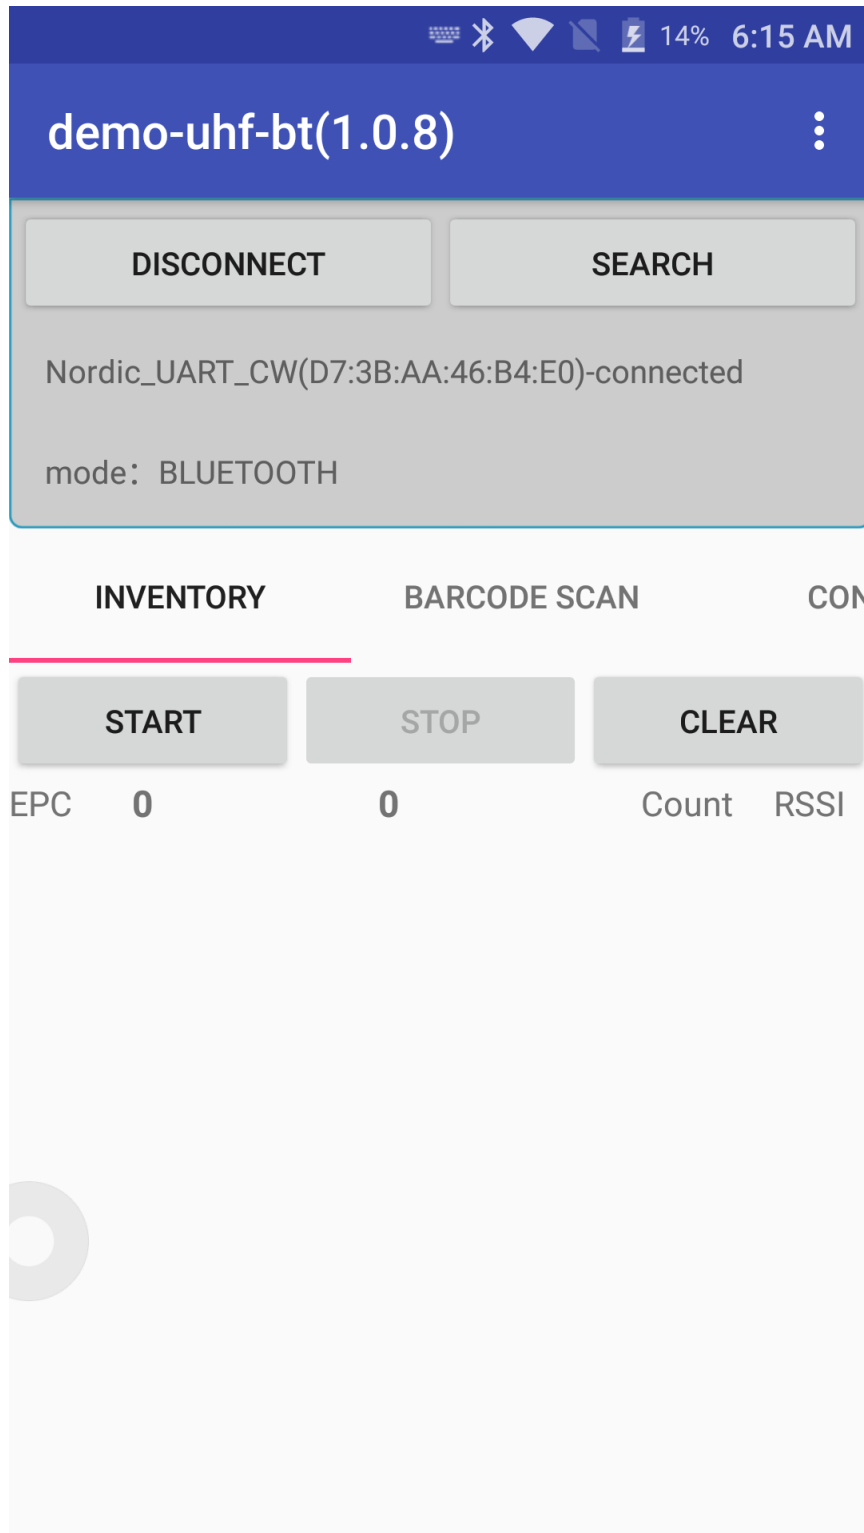


### 3.3 UHF Scan Function

1. Click START in demo or pull the trigger on R6, the UHF tags could be read.
2. Click STOP in demo to stop reading of UHF tags.
3. Click CLEAR to clean all EPC information.

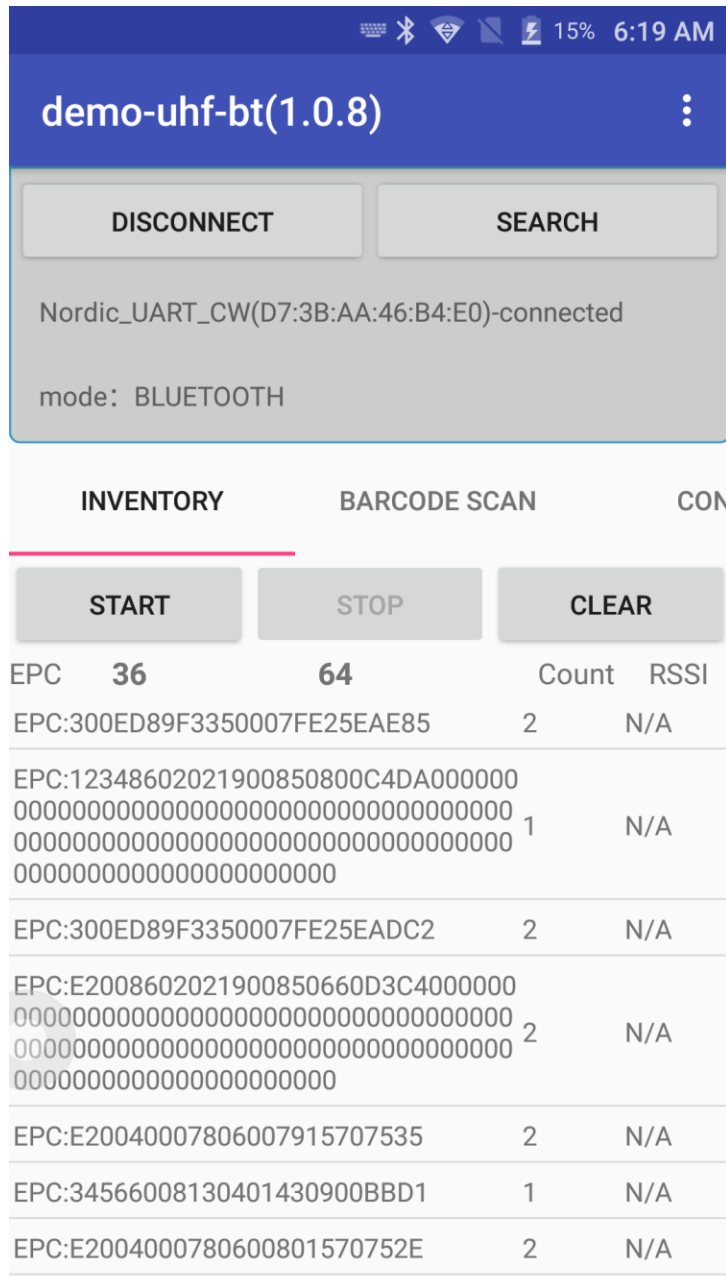

### 3.4 UHF Configuration

1. Click CONFIG in demo to adjust working mode and output power.

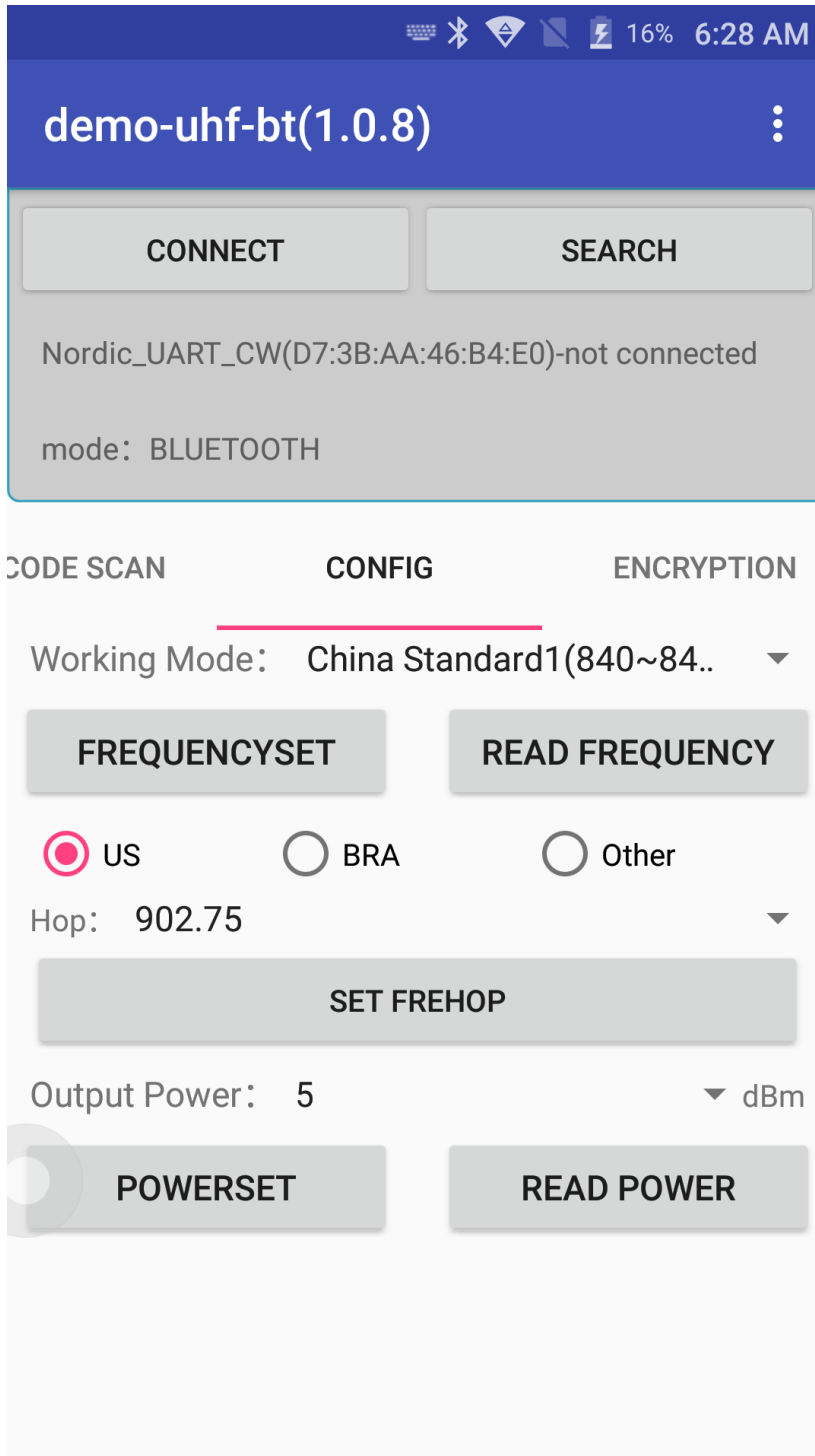




## 3.5 UHF Encryption

1. Click ENCRYPTION to decrypt and encrypt the special zones of UHF tags such as USER, EPC, etc.



## 3.6 UHF Tag Reading and Writing

1. The storage of one tag has 4 zones: RESERVED, EPC, TID and USER. Normally, the default password is 00000000. And TID zone can only be read, other zones can be read and written.

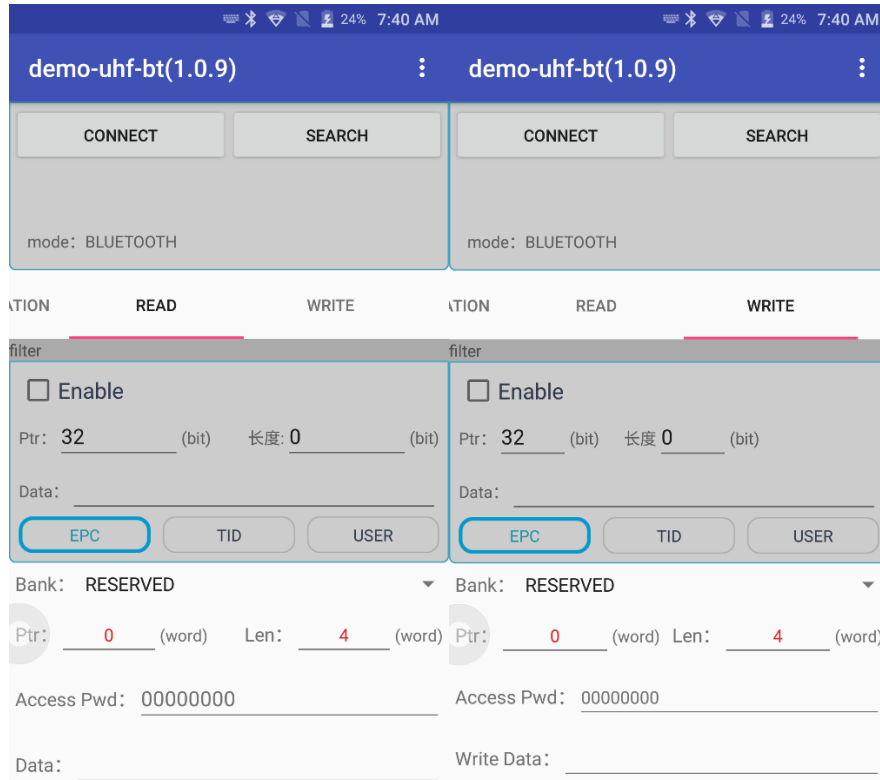

## 3.7 UHF Tag Lock and Kill

### 1. Lock Function:

For example. User could try to lock down EPC zone.

The screenshot shows the 'demo-uhf-bt(1.0.9)' application interface. At the top, there is a status bar with icons for keyboard, Bluetooth, Wi-Fi, signal strength, battery (25%), and time (8:00 AM). Below the status bar is a blue header with the text 'demo-uhf-bt(1.0.9)' and a three-dot menu icon. Underneath the header are two buttons: 'CONNECT' and 'SEARCH'. Below these buttons, the text 'mode: BLUETOOTH' is displayed. The main content area has three tabs: 'E', 'LOCK', and 'KILL'. The 'LOCK' tab is selected and highlighted with a red underline. Below the tabs is a 'filter' section with a grey background. It contains an 'Enable' checkbox, which is currently unchecked. Below the checkbox are two input fields: 'Ptr: 32 (bit)' and '长度: 0 (bit)'. Below these fields is a 'Data:' label followed by an empty input field. At the bottom of the filter section are three buttons: 'EPC', 'TID', and 'USER'. The 'EPC' button is highlighted with a blue border. Below the filter section is an 'Access Pwd:' label followed by an input field containing '00000000'. Below that is a 'Lock Code:' label followed by an input field containing '008020'. At the bottom of the screen is a large teal button labeled 'LOCK'.


## 2. Kill Function:

Kill function can be used to kill the tag permanently. Input the correct access password and click kill.

The screenshot shows the 'demo-uhf-bt(1.0.9)' application interface. At the top, there is a status bar with icons for keyboard, Bluetooth, Wi-Fi, signal strength, battery (27%), and time (8:12 AM). Below the status bar is a blue header with the text 'demo-uhf-bt(1.0.9)' and a three-dot menu icon. Underneath the header are two buttons: 'CONNECT' and 'SEARCH'. Below these buttons, the text 'mode: BLUETOOTH' is displayed. The main content area has three tabs: 'E', 'LOCK', and 'KILL'. The 'KILL' tab is selected and highlighted with a red underline. Below the tabs is a 'filter' section with a checkbox labeled 'Enable' which is unchecked. Below the checkbox are two input fields: 'Ptr: 32 (bit)' and '长度: 0 (bit)'. Below these fields is a 'Data:' label followed by an empty input field. At the bottom of the filter section are three buttons: 'EPC', 'TID', and 'USER'. Below the filter section is the 'Access Pwd:' label followed by the input field containing '00000000'. At the bottom of the screen is a large teal button labeled 'KILL'.


## 3.8 Firmware Upgrade

1. Copy the firmware bin. file into internal storage.
2. Click Select file to search for bin.
3. Click Upgrade to upgrade firmware.

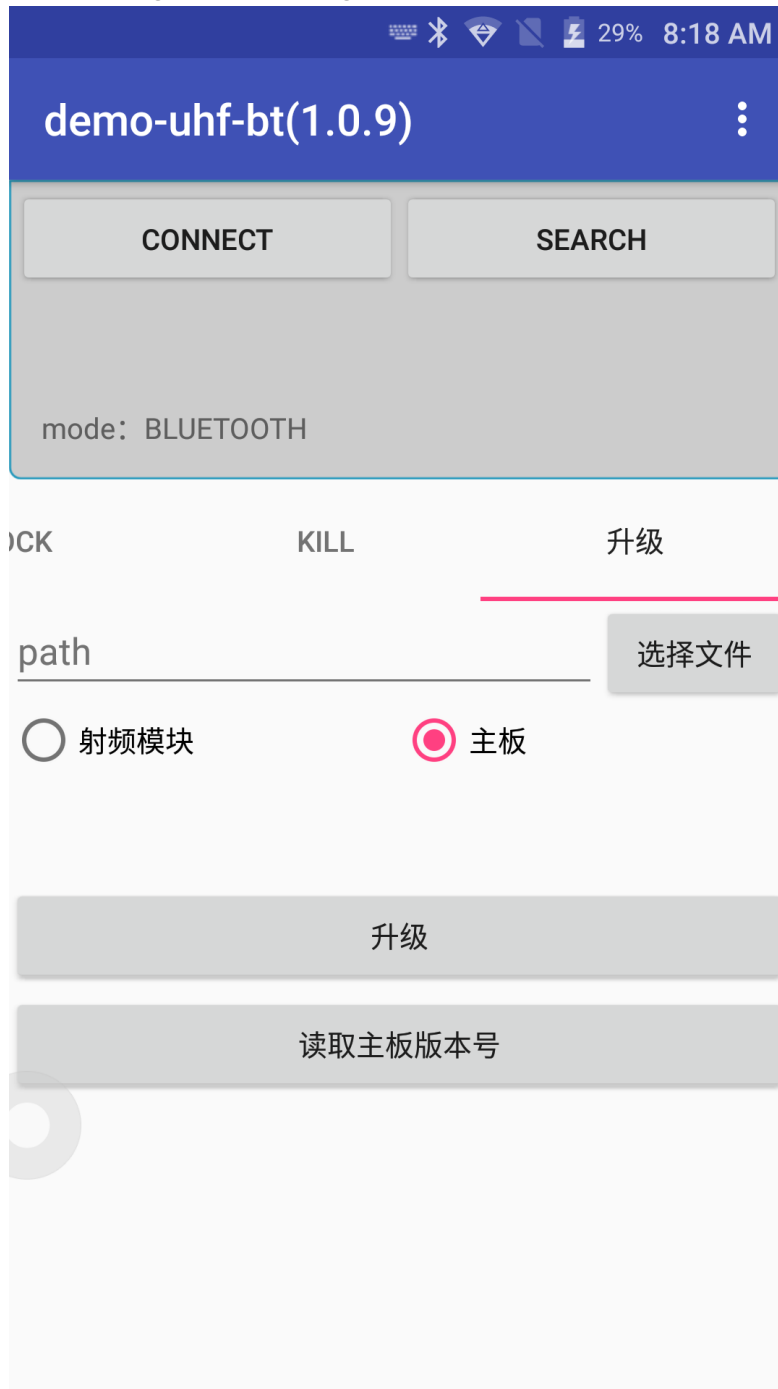

### 3.9 Barcode Scan Test

Select BARCODE SCAN in the demo and click SCAN button on the screen to scan barcodes.

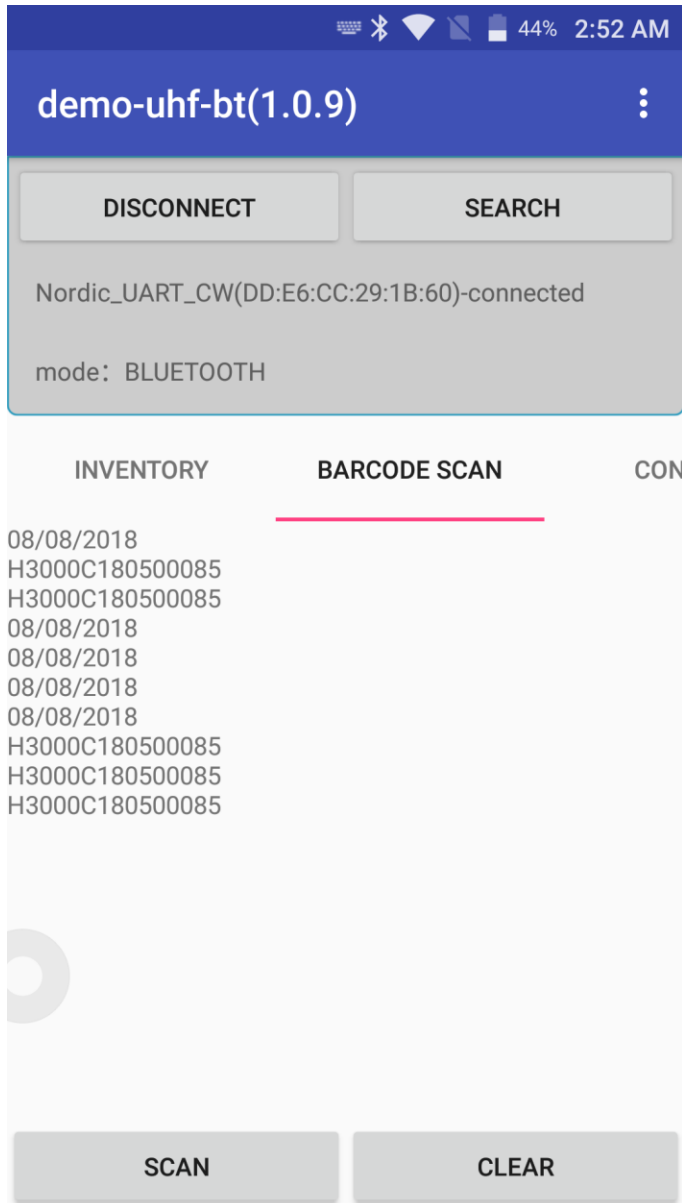

# Chapter 4 Device characteristic

## Physical characteristics

<b>Size</b>	153.96x76x129.08mm
<b>Weight</b>	445g
<b>Color</b>	Black
<b>Appearance material</b>	Plastic
<b>Product material</b>	Plastic
<b>Battery specification</b>	2600mAh/5200mAh
<b>Indicator LED</b>	Power, Work, Bluetooth
<b>Buzzer</b>	Support
<b>Interfaces</b>	Micro-USB

## Performance

<b>MCU</b>	Cortex-M3/72 MHz
<b>RAM+ROM</b>	64M+4G

## User environment

<b>Operating temp.</b>	-20°C to 50°C
<b>Storage Temp.</b>	-40°C to 70°C
<b>Humidity</b>	5%RH - 95%RH non condensing

### Data collection

<b>2D Imager Scanner</b>	SE2707
<b>1D Symbologies</b>	UPC/EAN, Code128, Code39, Code93, Code11, Interleaved 2 of 5, Discrete 2 of 5, Chinese 2 of 5, Codabar, MSI, RSS, etc.
<b>2D Symbologies</b>	PDF417, MicroPDF417, Composite, RSS, TLC-39, Datamatrix, QR code, Micro QR code, Aztec, MaxiCode; Postal Codes: US PostNet, US Planet, UK Postal, Australian Postal, Japan Postal, Dutch Postal (KIX), etc.

### UHF

<b>Antenna</b>	Circular Polarized antenna (4dBi)
<b>Frequency</b>	920-925MHz/902-928MHz/865-868MHz
<b>Protocol</b>	EPC C1 GEN2 / ISO18000-6C
<b>Module power</b>	1W (30dBm, support +5~+30dBm adjustable)
<b>R/W range</b>	>28m(indoors);>12m(open outdoors)
<b>Reading rate</b>	>200tags/s * Ranges and rates depend on tags and environment